

V313 Volkswagen PQ original car manual air conditioner

Installation process: Precautions:

1. Pay attention to protecting the appearance of the central control unit and use a large towel to spread it.
2. Turn off the key switch and do not install with power on.
3. When plugging in the wire, please make sure it is seated correctly. Do not insert it forcefully. Check whether the buckle is correct before plugging in the wire.
4. The original car 20P power cord must be used with an adapter cable

1. Product picture



2. Original car central air conditioner



3.Remove the original car air conditioning panel first

First remove the frame of the original car central control screen



Remove the original car manual air conditioning switch face frame

Remove the 4 fixing screws of the original car air conditioning switch

Remove



Unplug the original car air conditioning switch wire, a total of 3 wire




Unplug the 3 wires from
the original car

4. Find the location reserved for the temperature sensor in the original car.
Usually
They are behind the air vents on the left and right sides of the instrument
panel.



Open the right side
cover of the instrument
panel

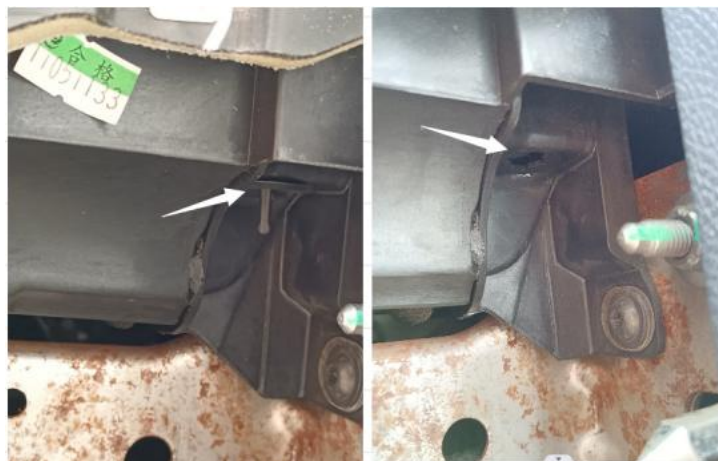

Find the location where
the temperature sensor
is installed and remove
the rubber plug to
install the sensor.



Install

temperature

sensor

5. The 3 wires of the original car air conditioner and the V313 air conditioner controller

Adapter cable docking



6. Plug the transferred wire harness into the corresponding interface behind the screen.



7. After plugging in the wires, power on and test the function normally and then install it into the original car for central control.

Fix it with the original 4 screws



8. Install the face frame, first install the air conditioning face frame and then the central control screen face frame.



9. The following is the effect after installation

